

# CAME Frog

## MANUAL OPERATION



**WARNING: BEFORE CARRYING OUT THE RELEASE AND SHUT-DOWN OPERATIONS, MAKE SURE THAT YOU HAVE CUT POWER TO THE OPERATOR.**

## Manual Release Instructions



### Underground Gate Operator **FROG - Lever Release System**

The Frog Underground system is supplied with one of three release mechanisms; a triangle key system, a DIN key system or a lever system. Release instructions for the lever system are below and the key systems on the previous page.



#### To manually release the gates:

- ⚡ ALWAYS isolate the power supply as instructed by your installer (even in a power cut).
- ⚠ Release any additional locking device fitted to the gate (eg. electric lock etc).
- ① Lift tab.
- ② Insert lever (a) into lock and turn **away** from the gate post.
- ③ With the lever in place (fully turned 90°) using your other hand, firmly open the gate. The gate should now be manually released. Now open the gate carefully at the same speed as the automatic operator.



To re-engage the gate, pass the gate over the shoe and it will re-engage. Please note, it may be necessary to operate the motor once power is restored to fully engage the system. Please take due care when operating the system in this manner.

### FROG Basic Maintenance

#### Hints & Tips

- ① Lift manual release tabs & spray the locks on both sides with suitable penetrating lubricant.
- ② Spray into the lock at the connecting part (brass part) with suitable penetrating lubricant (See ④).
- ③ Lubricate gate hinges.
- ④ Manually release the gates at least once per month.

