## DEA 600 (gate mounted operator)

## MANUAL OPERATION



WARNING: BEFORE CARRYING OUT THE RELEASE AND SHUT-DOWN OPERATIONS, MAKE SURE THAT YOU HAVE CUT POWER TO THE OPERATOR.

## **OLI 600 RELEASE SYSTEM**

The OLI 600 hydraulic operator is equipped with a release system to be used to open the gate whenever a power failure occurs with the following operation (see the figure below). After the lock on the hendle has been opened (protected by the black plants: cover), the lever must be ratioted clockwise to the end of its stroke (to approx. 90%) at this point, the OLI 600 operator is released and if no other obstructions are present, the gate is free to move without bindrames.

The opposite procedure, in other words, the rotation of the lever to the end of its stroke (to approx. 90°) in the counter-clockwise direction and the closing of the lock (remember to protect the lock with the respective cover) returns the OLI 600 operator to normal working conditions.

