

Manual/Emergency release for locking ram

- Isolate the incoming power supply.
- On top of the gate operator there is a black plastic cover turn 90 degrees to reveal lock, insert key (No.2524) into lock and turn 90 degrees then turn the black plastic unit 90 degrees. The gate can now be moved slowly to its open position. Repeat the operation on the other gate.

