

FAAC 415 (gate mounted operator)

MANUAL OPERATION



WARNING: BEFORE CARRYING OUT THE RELEASE AND SHUT-DOWN OPERATIONS, MAKE SURE THAT YOU HAVE CUT POWER TO THE OPERATOR.

6. MANUAL OPERATION

If the automated system needs to be moved manually due to a power lack or to an operator malfunction, proceed as follows:

- 1) Cut power by means of the safety circuit breaker (even in the event of a power lack).
- 2) Slide the protective cap, Fig.21/1.
- 3) Insert the key and turn it 90°, Fig.21/2.
- 4) To release the operator turn 180° the control lever to the direction indicated by the arrow on the release system, Fig.21/3.
- 5) Open and close the leaf manually.


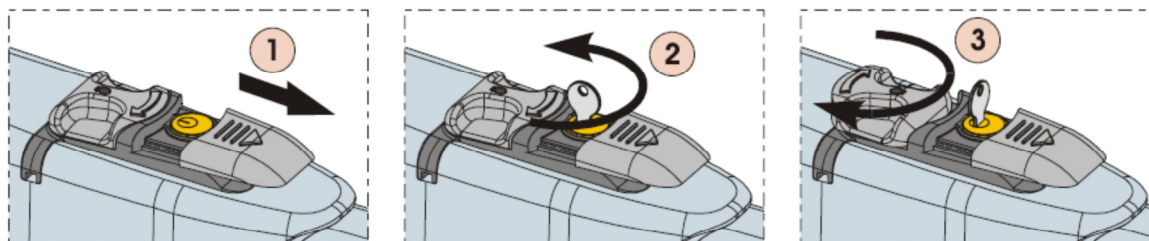


Fig. 21

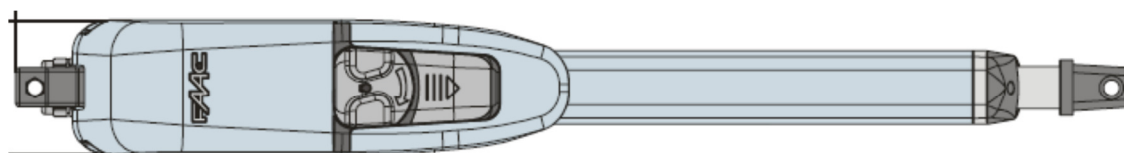

Note: To hold the operator in manual operation the release device should be left in its current positions and the system should be without power.

6.1. Restoring normal operation

To restore normal operating conditions, proceed as follows:

- 1) Turn the release system 180° in the opposite direction of the arrow.
- 2) Turn 90° the release key and remove it.
- 3) Close the protection cover.
- 4) Power up the system and perform some movements in order to check the correct restoring of every function of the automated system.