

SEA Compact 400 (underground motor)

MANUAL OPERATION



WARNING: BEFORE CARRYING OUT THE RELEASE AND SHUT-DOWN OPERATIONS, MAKE SURE THAT YOU HAVE CUT POWER TO THE OPERATOR.

5. RELEASE SYSTEM

5.1. To release act as follows:

- Use the supplied key top surface to open the release cap which protects the extension previously installed (Fig. 19)
- Put the key into the release extension and turn the handle of about 180° anti-clockwise (Fig. 20)
- Take the key off and close the hole with the release cap.

5.2. To stop again act as follows:

- Use the supplied key top surface to open the release cap
- Put the key into the release extension and turn the handle clockwise until it stops.
- Take the key off and close the hole with the release cap.

5.3. External release:

- Being an emergency manoeuvre, the external release has the only function to release, **to relock the operator it is always necessary to use the internal release.** (Fig.15)

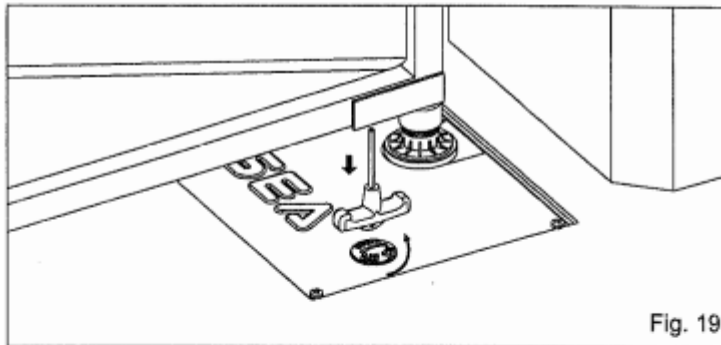


Fig. 19

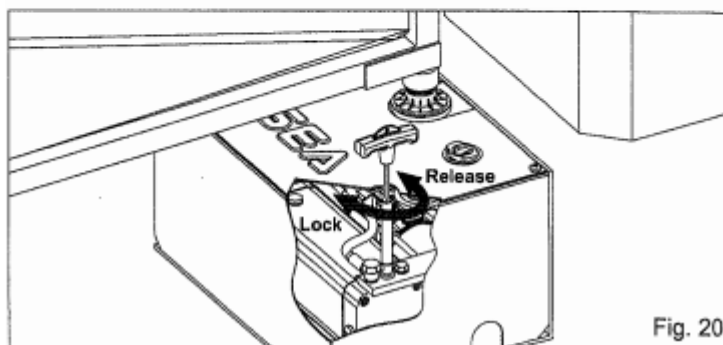


Fig. 20